INSTALLATION INSTRUCTIONS FOR 9802- PL

For Wall Sconce Fixture

READ AND SAVE THESE INSTRUCTIONS

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER .

MOUNTING THE FIXTURE (Fig.1)

1. Shut off power at the fuse box or circuit breaker box. If necessary, remove old fixture and all mounting hardware from wall junction box.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Attach the crossbar to the junction box with the two junction box screws as shown. The side of the crossbar marked “GND” must face out.
4. Thread the nipple part way into the center hole of the crossbar.
5. Connect the wires as described under “Connecting the Wires”.

CONNECTING THE WIRES (Fig.2)

6. Connect the fixture wires to the junction box wires as shown in the Fig. 2. Make sure all wire connectors are secured and do not easily pull off with a slight tug. If there is no green ground wire from the junction box, connect the fixture ground wire to the crossbar with the green screw provided.
7. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor silicone sealant) to outline the outside of fixture backplate where it meets the wall leaving a space at bottom to allow moisture a means to escape (Fig.4)

COMPLETING THE INSTALLATION (Fig.1)

8. Place the fixture over the nipple so the nipple protrudes through the center hole. Holding the fixture in place, thread the cap nut onto the end of the nipple until fixture is secured to the wall.
9. Install the PL lamp in accordance with the fixture’s specification. (1×Max26W included). **(DO NOT EXCEED THE MAXIMUM WATTAGE RATING!!)**
10. The ballast in each of these models can be replaced by a qualified electrician without cutting of wires and without damage to the housing, trim, decorative elements or carpentry to which the fixture is attached. See installation steps for more detail. The ballast and lamp are combined, to replace or install, twist pins into socket as shown on Fig.3.
11. Place the glass with the marked arrow on the topside into the fixture. Then secure the steel bar with screws and plastic washer.
12. This fixture contains an integrated photo sensor that automatically prevents operation during daylight hours.
13. This fixture is rated for a minimum start temperature of -17° Celsius.
14. This fixture is UL Listed for Wet Location applications.

Your installation is now complete. Return power to the junction box and test the fixture.

LIMITED 2 YEAR WARRANTY

This Fixture is covered by a Limited 2 year Warranty from the Manufacturer, effective from the date of purchase. This fixture is warranted against defects in the quality of the housing, trims, diffuser, shades, and electrical components. Fixture finishes and/or lamps (bulbs) are expressly excluded from this warranty; refer to bulb manufacturer for lamp warranty. This Fixture, if supplied with an automatic shut off sensor, motion control sensor, or photocell, cannot be installed in conjunction with any other device without voiding warranty. Modifying this fixture or use of another non-provided control will also void Product Warranty and UL listing.

ENERGY STAR

LISTED

american lighting association

II365

Fig.1

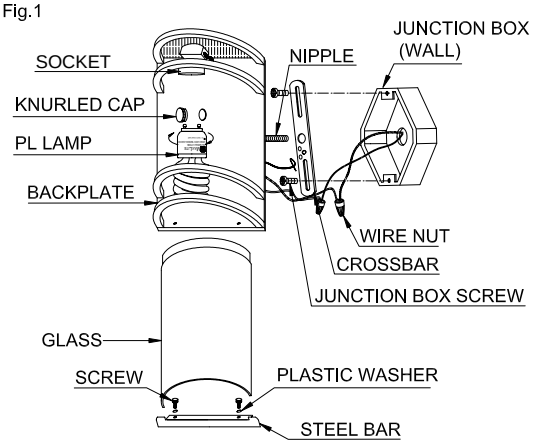

Fig .2

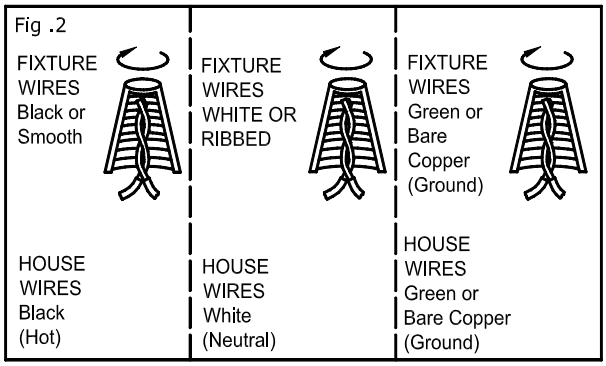
FIXTURE WIRES Black or Smooth
FIXTURE WIRES WHITE OR RIBBED
FIXTURE WIRES Green or Bare Copper (Ground)
HOUSE WIRES Black (Hot)
HOUSE WIRES White (Neutral)
HOUSE WIRES Green or Bare Copper (Ground)

Fig.3

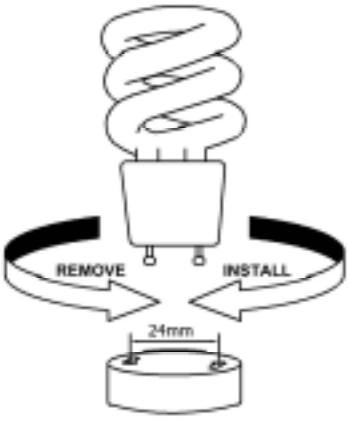

Fig.4